

Fuel Moto

2002-2006 Harley Davidson

Touring Models Installation Instructions

Parts List

- 1 EFI Tuner
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 1 Velcro Strip
- 1 Alcohol Swab
- 3 Zip ties



The ignition MUST be turned OFF before installation!


You can also download the Power Commander software and latest maps from the Dynojet® web site at:

www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Fuel Moto 2215 Kelbe Drive Little Chute, WI 54140 (877) 729-4754 www.fuelmotousa.com

Fig. A

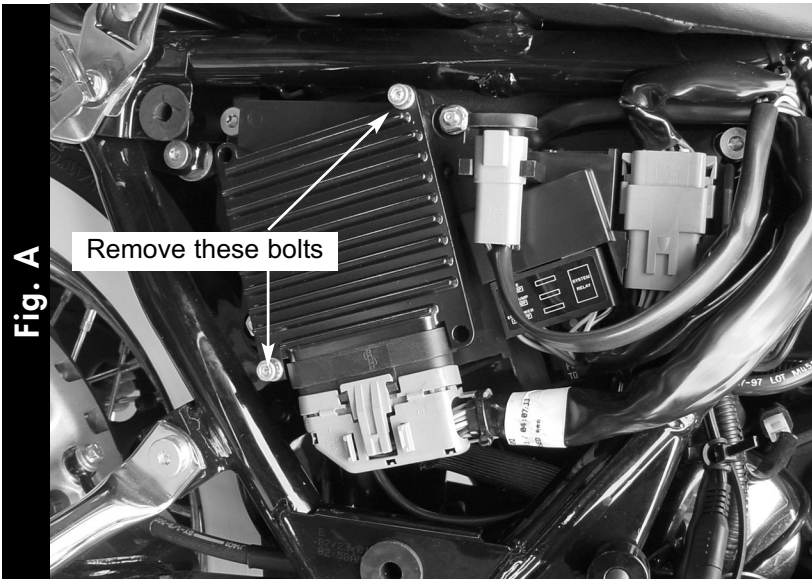

- 1 Remove the right hand side cover.
- 2 Unplug the wiring harness from the ECM. Remove the two bolts that hold the ECM to the battery tray (Fig. A).


Fig. B

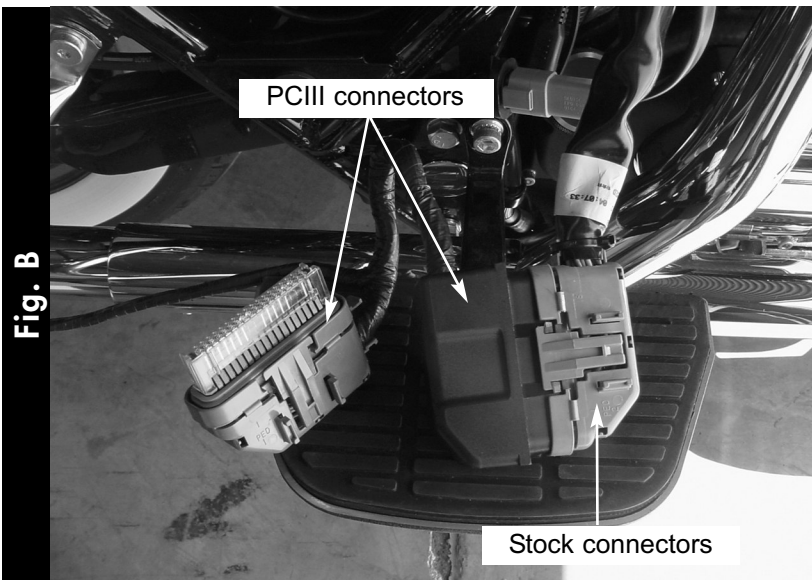


- 3 Plug the black connector from the PCIII into the stock wiring harness (Fig. B).

Note: It is recommended to use dielectric grease on this connection.


Fig. C

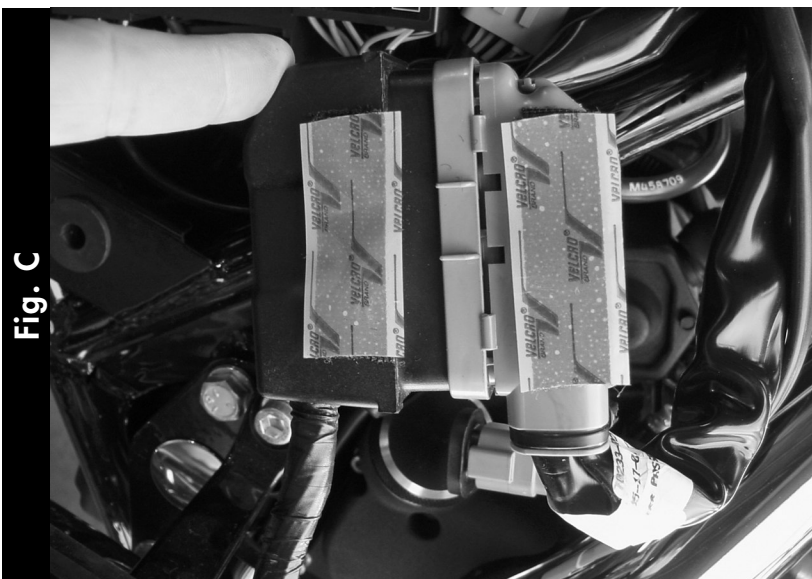

- 4 Clean the backside of these two connectors with the supplied alcohol swab. Install the supplied velcro to the backside (opposite release tab) of the connectors (Fig. C).

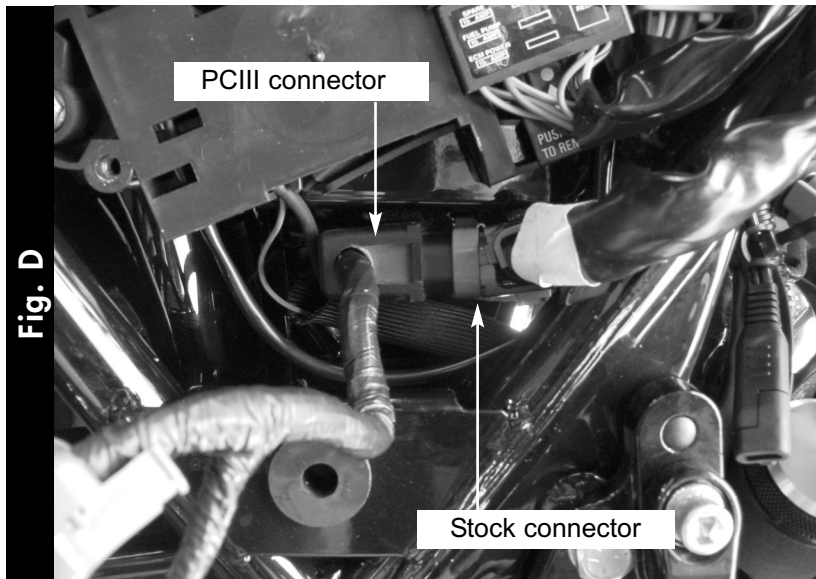

5 Remove the backing from the velcro and mount connectors to the bottom side of the battery tray (Fig. D).

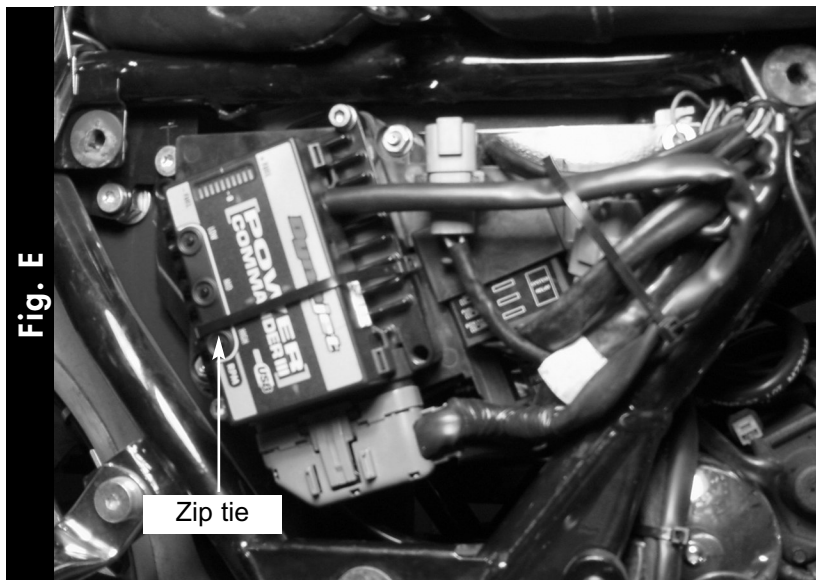

6 Plug the grey connector from the PCIII into the ECM.

Note: It is recommended to use dielectric grease on this connection

7 Reinstall the ECM. Before tightening down the bolts, slide at least 1 zip tie behind the ECM to secure the PCIII (Fig. E).



The unit can also be installed as in Fig. F. Use a zip tied to hold the connectors in place.