

Fuel Moto

2004-2005 Harley Davidson Dyna Installation Instructions

Parts List

- 1 EFI Tuner
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Velcro Strip
- 1 Alcohol Swab



The ignition MUST be turned OFF before installation!


You can also download the Power Commander software and latest maps from the Dynojet® web site at:

www.powercommander.com


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION



- 1 Remove the seat
- 2 Remove the left hand side cover (Fig. A).

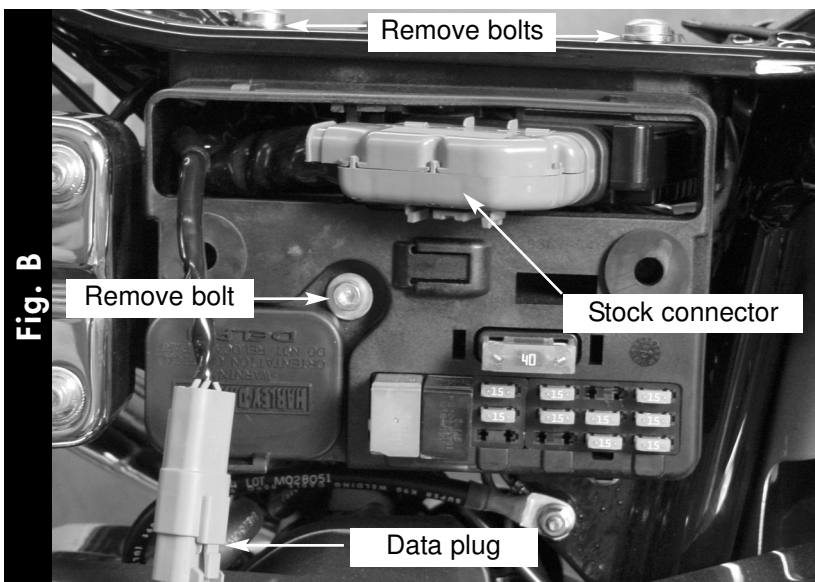


- 3 Unplug the stock wiring harness connector from the ECM (Fig. B).
- 4 Move the data plug (Fig. B) out of the way to access bolt.
- 5 Remove the 3 bolts that hold the electrical box in place (Fig. B).

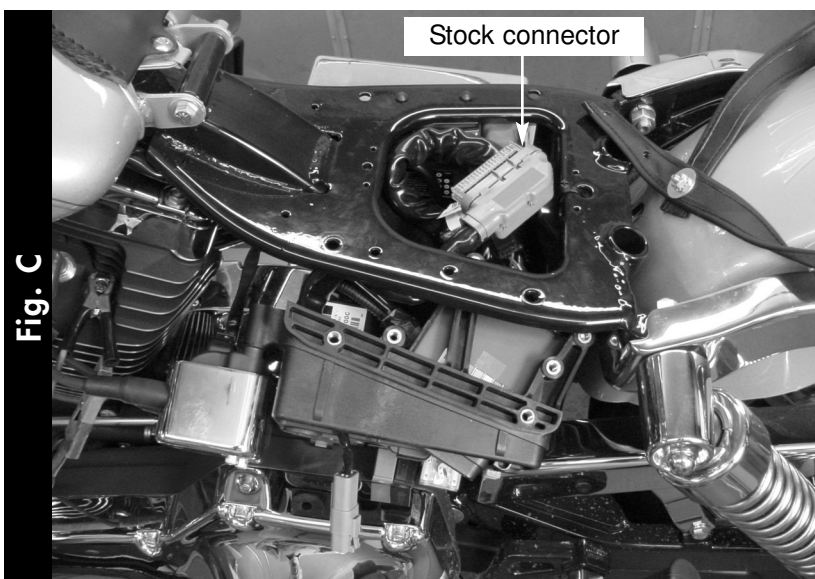


- 6 Slide the plastic box out from the frame.
- 7 Route the stock connector through the box and into the small opening in the frame (Fig. C).

Fig. D

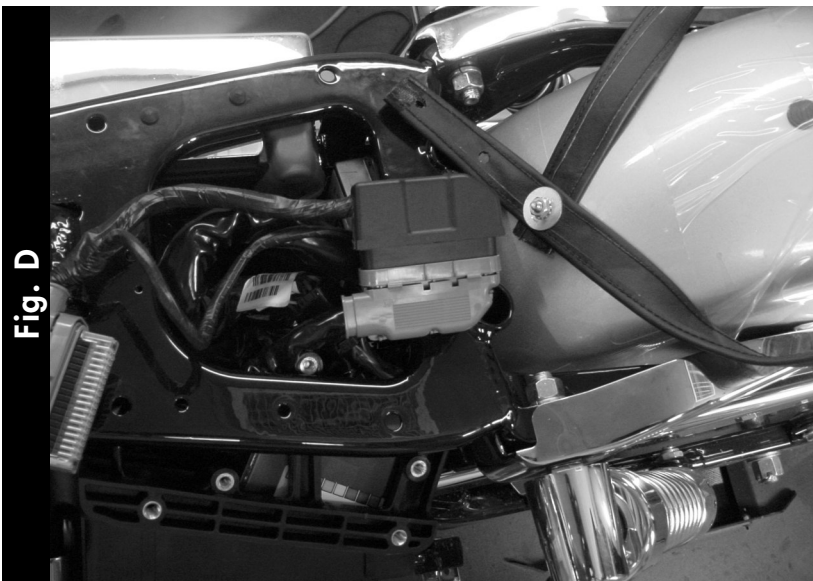

- 8 Plug the black connector of the Power Commander into the stock wiring harness connector (Fig. D).
- 9 Route the grey connector of the Power Commander through the box and plug it into the ECM.

Fig. E

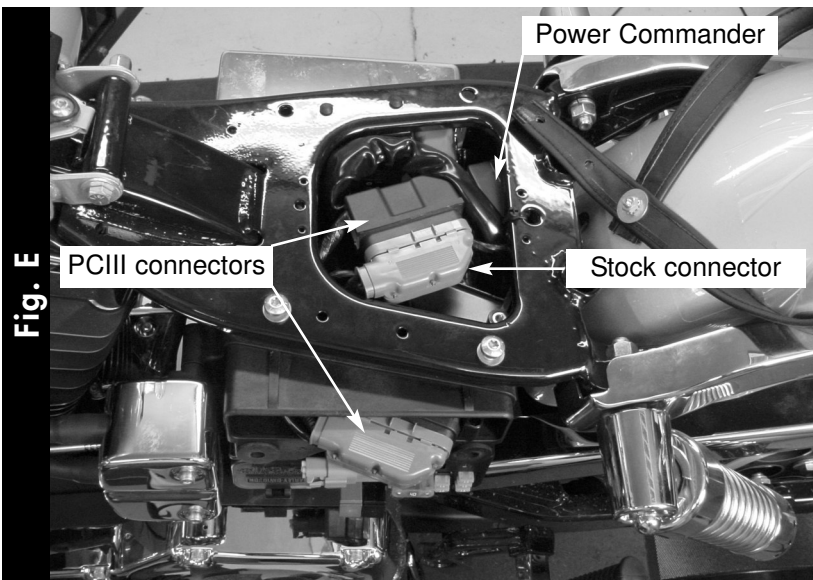

- 10 Install the Power Commander against the rear part of the electrical box. Make sure to clean both surfaces with the alcohol swab first. Use the supplied velcro to attach the Power Commander.
- 11 Bolt the box back into place.
- 12 Reinstall the seat.