

Custom Dynamics® Shark Demon® Road Glide Spacer Kit Installation Instructions



We thank you for purchasing the Custom Dynamics® Shark Demon® Road Glide Spacer Kit. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: SD2-SPACER

Package Contents:

- Shark Demon® Spacers (2)
- M6-1.0 x 26mm Socket Head Screws (8)
- M6 Split Washers (8)
- 1/4-20 x 1.25" Socket Head Screws (2)
- Instructions (1)

Note: SD1 use all hardware, SD2 use M6-1.0 x 26mm Socket Head Screws (4), M6 Split Washers (4), 1/4-20 x 1.25" Socket Head Screws (2).

Fits: 2015-2023 Harley-Davidson® Road Glide (FLTRX), Road Glide Special (FLTRXS), 2022-2023 Road Glide ST (FLTRXST) & CVO™ Road Glide Limited (FLTRKSE), 2020-2023 Road Glide Limited (FLTRK), 2018-2022 CVO™ Road Glide (FLTRXSE), 2016 -2019 Road Glide Ultra (FLTRU), 2020-2022 CVO™ Road Glide Ultra (FLTRUSE) and 2023 Road Glide 3 (FLTR3) Use with Custom Dynamics® Shark Demon™ Performance LED Headlight Kit for Road Glides when motorcycle is equipped with Rockford Fosgate M5-800X4 and most aftermarket Amps.



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.


Note: Some technical knowledge may be needed for this installation. Consult your vehicle detailed service manual for instructions on removing the front fairing and for electrical wiring information. If the steps contained within are beyond your skillset, do not attempt installation, contact a qualified mechanic or dealership to assist you.



Installation:

Note: This is a supplemental installation instruction guide for Road Glides with the Shark Demon® LED Headlight with an aftermarket stereo amp installed. Refer to main Shark Demon® LED Headlight instructions before starting.

1. Starting from step 12 of the Shark Demon® LED Headlight Installation Instructions. Install Shark Demon® LED Headlight and mounting brackets to Spacers using supplied hardware. Shown in Figures 1 & 2.

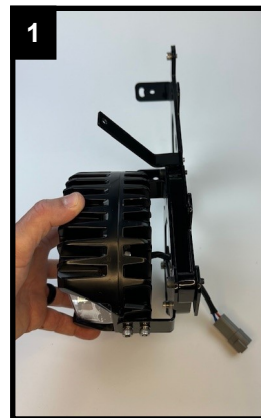

Questions? Email: Info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

2. Install Shark Demon® LED Headlight, bracket, and Spacer to mounting plate on motorcycle. Shown in **Figures 3, 4, & 5.**
3. Refer back to Shark Demon® LED Headlight Installation Instructions to complete install.

